

Heater

To turn on:

Long press (2 seconds) the round dial until the surround is illuminated red. The lighting in the van may flicker whilst the heater is igniting.

Wait 30 seconds until the fan is blowing.

Follow the next steps very carefully as accidentally turning the heater off will result in a cooling period before it can be re-lit.

Turn dial carefully until you see the three lines (heat symbol) flashing and a picture of a fan to the right (not flashing).

Press the dial once then turn clockwise once so the 'OFF' is NOT displayed.

Press the dial once to see the required temperature. We recommend 17 or 18 for sleeping and 21 at other times.

Press once when display shows required temperature.

Now it will have moved on to time (duration). Turn until desired duration is displayed or go one turn clockwise past 720 minutes to the infinity symbol for the heater to remain on indefinitely.

The fan will slow down incrementally when nearing the desired temperature to a point where it is very quiet.

To turn off:

Long press the round dial until illumination is off.

Do not use the heater when the vehicle is being driven.

If the dial surround colour is blue, you are in cooling mode and will need to long press again.

The heater will work when electric control panel is off.